



StudioLED 600

DMX Map

6 CH	Function	Value	Output
1	Red	0 - 255	0 - 100%
2	Green	0 - 255	0 - 100%
3	Blue	0 - 255	0 - 100%
4	Amber	0 - 255	0 - 100%
5	White	0 - 255	0 - 100%
6	Zoom	0 - 255	15 - 40°

12 CH	Function	Value	Output
1	Red	0 - 255	0 - 100%
2	Green	0 - 255	0 - 100%
3	Blue	0 - 255	0 - 100%
4	Amber	0 - 255	0 - 100%
5	White	0 - 255	0 - 100%
6	Dimmer	0 - 255	15 - 40°
7	Strobe	0 - 1 2 - 127 128 - 255	Open Strobe Rainbow Strobe
8	Fade Time	0 - 255	0 sec - 25 sec
9	Rainbow Chase	1 - 255	0 - 100%
10	White Balance	0 - 15 16 - 255	Normal Balance
11	Zoom Speed	1 - 255	0 sec - 25 sec
12	Zoom	1 - 255	15 - 40°

Stand Alone Presets

1	Fixed RED
2	Fixed GREEN
3	Fixed BLUE
4	Fixed RED + GREEN
5	Fixed RED + BLUE
6	Fixed GREEN + BLUE
7	Fixed RED + AMBER
8	Fixed GREEN + AMBER
9	Fixed BLUE + AMBER
10	Fixed RED + GREEN + AMBER
11	Fixed RED + BLUE + AMBER
12	Fixed GREEN + BLUE + AMBER
13	Fixed WHITE BALANCE 1
14	Fixed WHITE BALANCE 2
15	Fixed WHITE BALANCE 3
16	Fixed WHITE BALANCE 4
17	Fixed WHITE BALANCE 5
18	Fixed WHITE BALANCE 6
19	Fixed WHITE BALANCE 7
20	RAINBOW CHASE - SPEED 1 (FAST)
21	RAINBOW CHASE - SPEED 2
22	RAINBOW CHASE - SPEED 3
23	RAINBOW CHASE - SPEED 4
24	RAINBOW CHASE - SPEED 5 (SLOW)

To enter menu:

Press "DOWN"

Press "UP"

Press "ESC"

Press "ENTER"

